 
 




P140

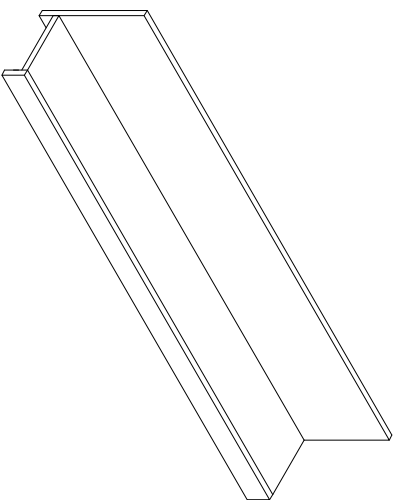

23.3.2016


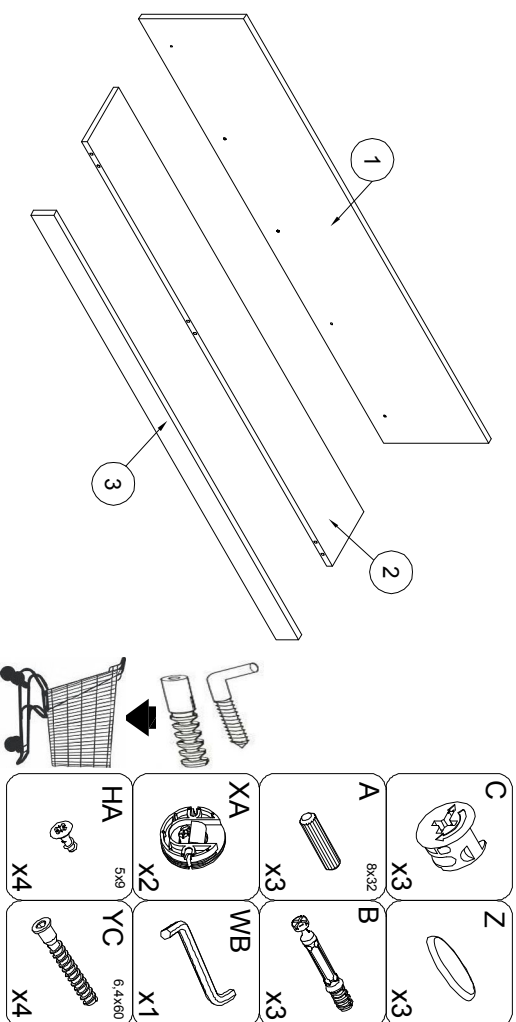


  - (D) Montageanleitung
- (FR) Notice de montage
- (NL) Handleiding voor de montage
- (CZ) Montážní návod
- (HU) Szerelési útmutató
- (TR) Montaj talimatı
- (GB) Assembly Instructions
- (IT) Istruzioni di montaggio
- (PL) Instrukcja montażu
- (SK) Návod na montáž
- (RO) Instrucțiuni de montaj
- (RU) Инструкции по монтажу

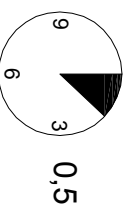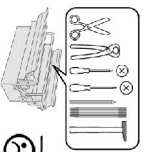


1

 
 
2

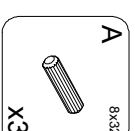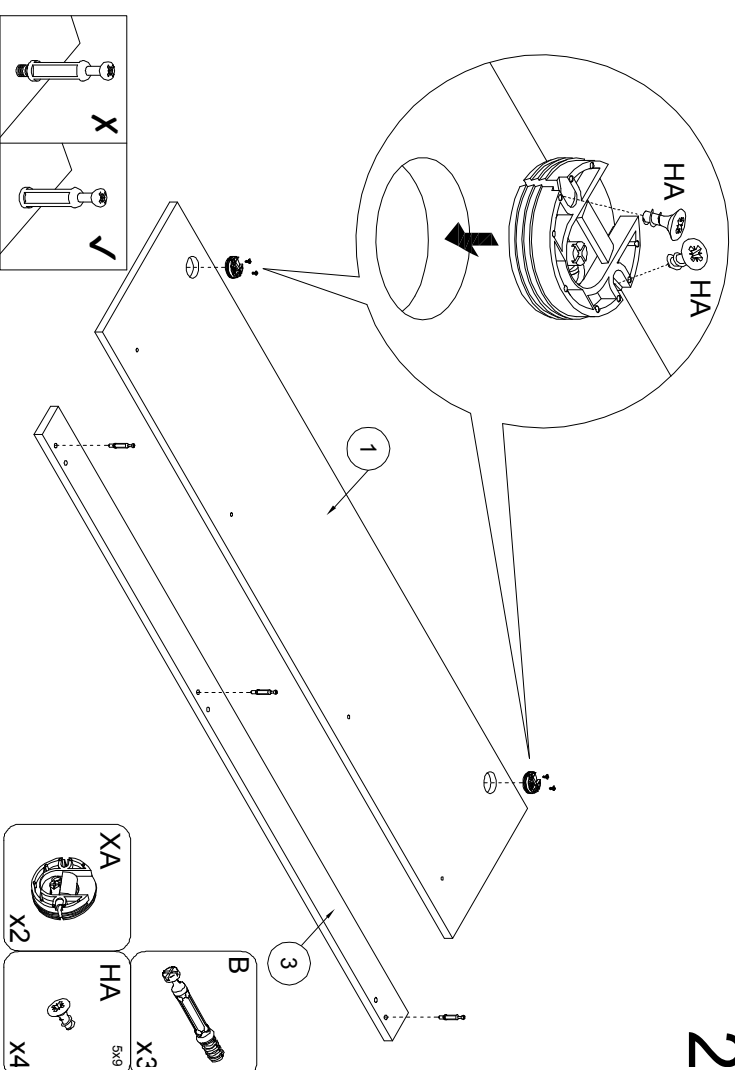



3

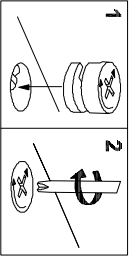 



4

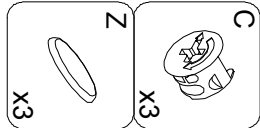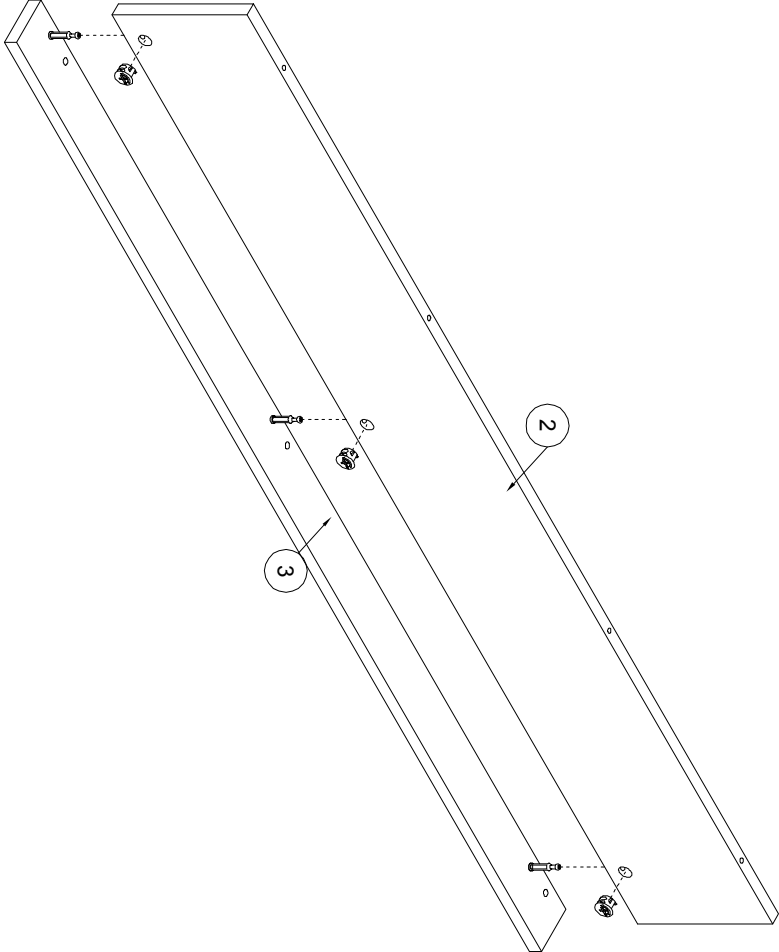  

5

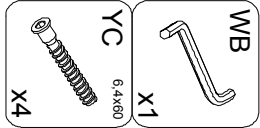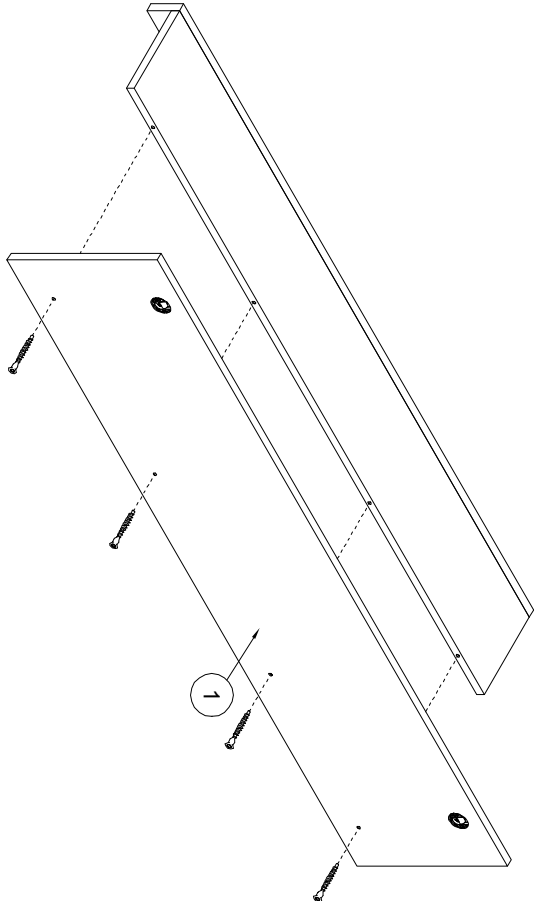  



REG. 80

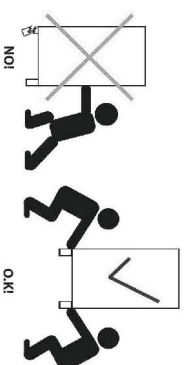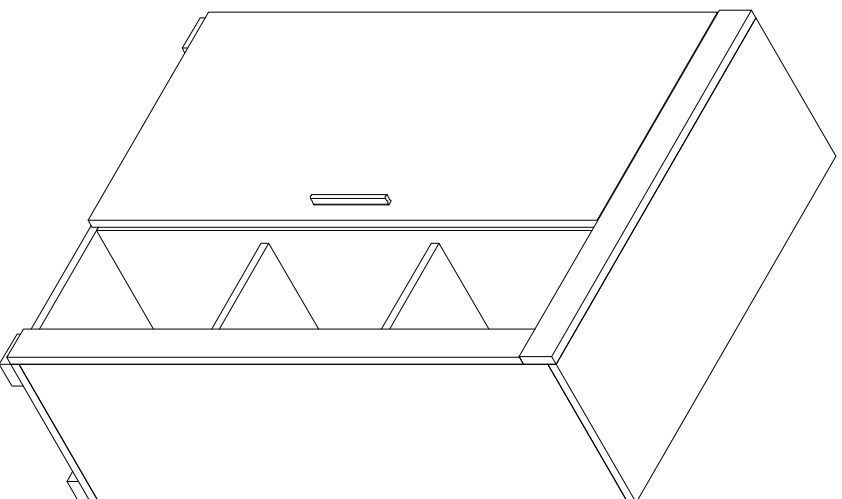  


23.05.2016

- (D) Montageanleitung
- (FR) Notice de montage
- (NL) Handleiding voor de montage
- (CZ) Montážní návod
- (HU) Szerelési útmutató
- (TR) Montaj talimatı

 
 
- (GB) Assembly Instructions
- (IT) Istruzioni di montaggio
- (PL) Instrukcja montażu
- (SK) Návod na montáž
- (RO) Instrucțiuni de montaj
- (RU) Инструкции по монтажу

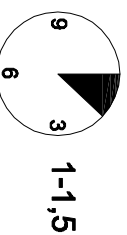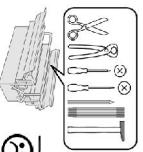

1

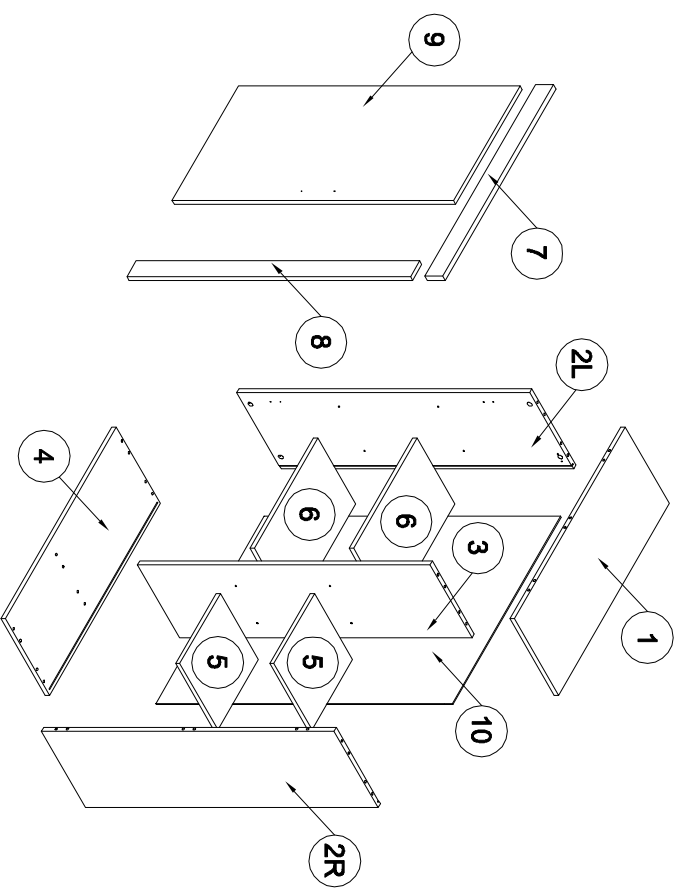 


R	x2	H	6.3x13	x4	W	x1	YA	4x27	x2	C	x18	Z	x18	Y	x5	TB	x1
A	8x32	Z	x16	B	x18	NA	4x13	P	x2	X	x8	N	3x20	TB	x1		
x18																	

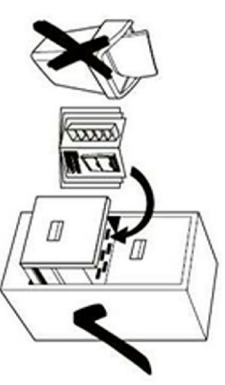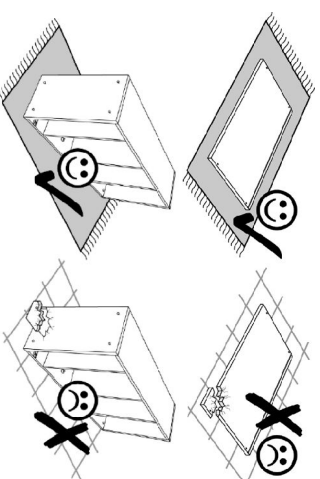  


2

 
3

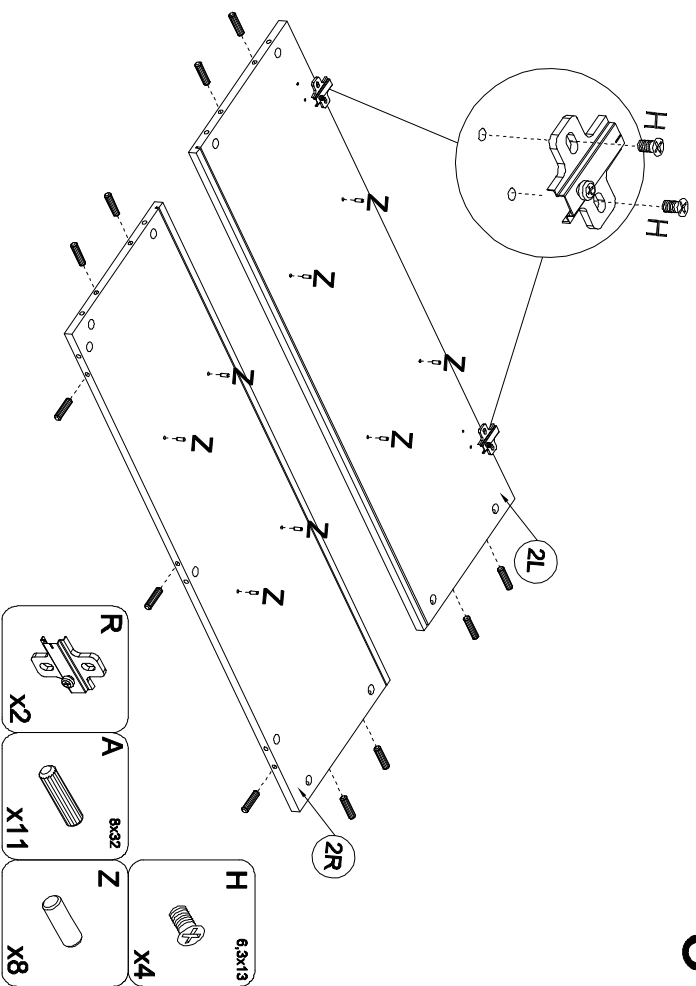


4

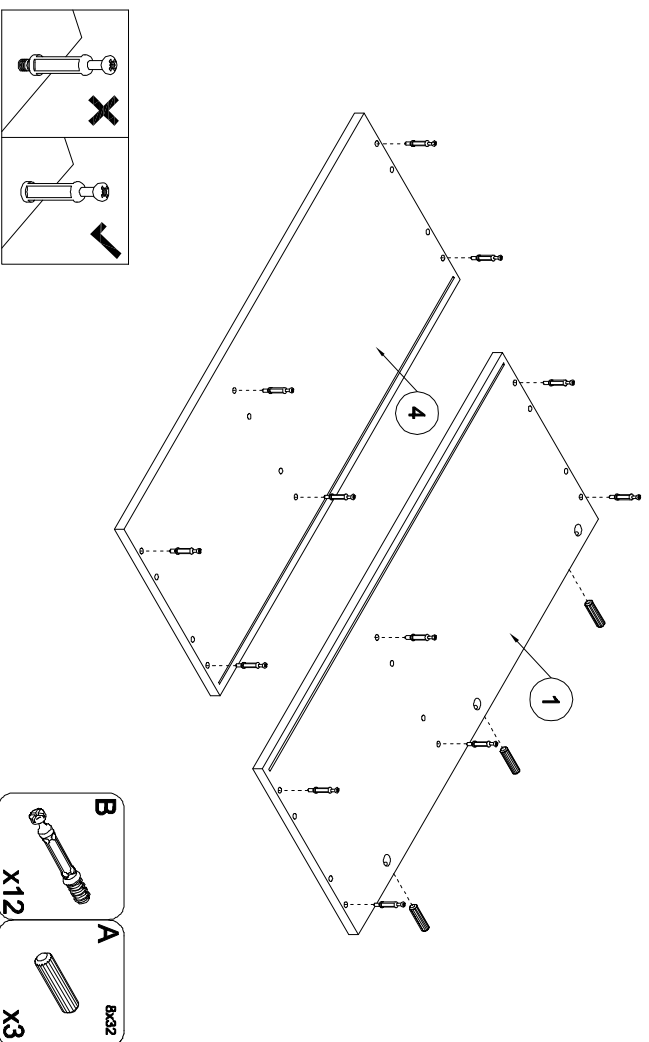 


5

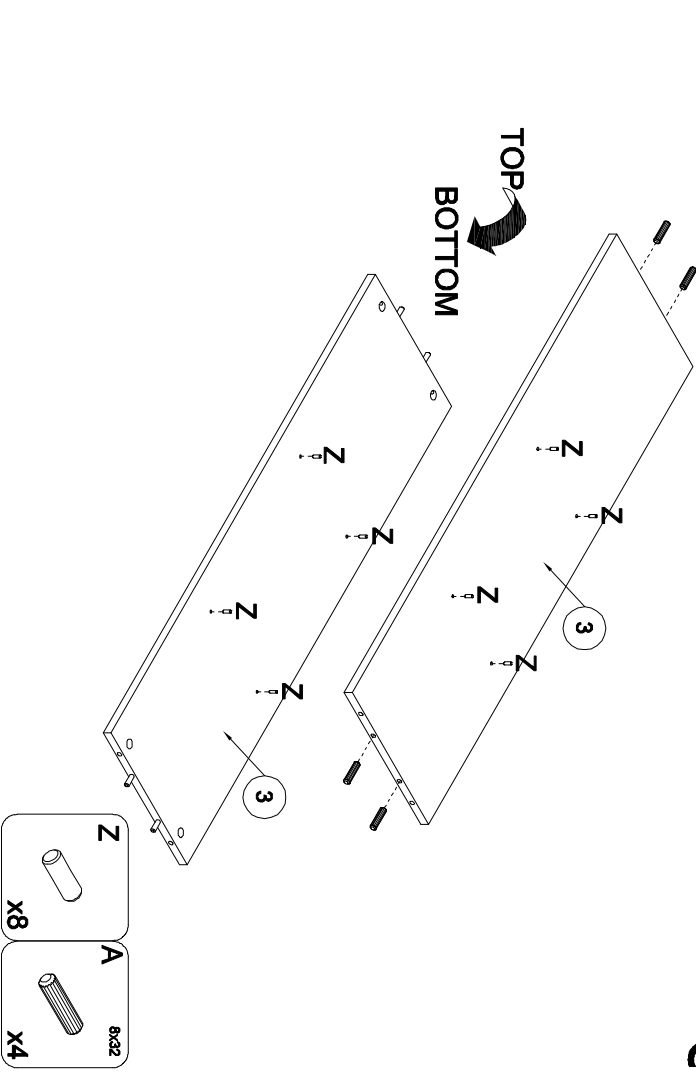 


6

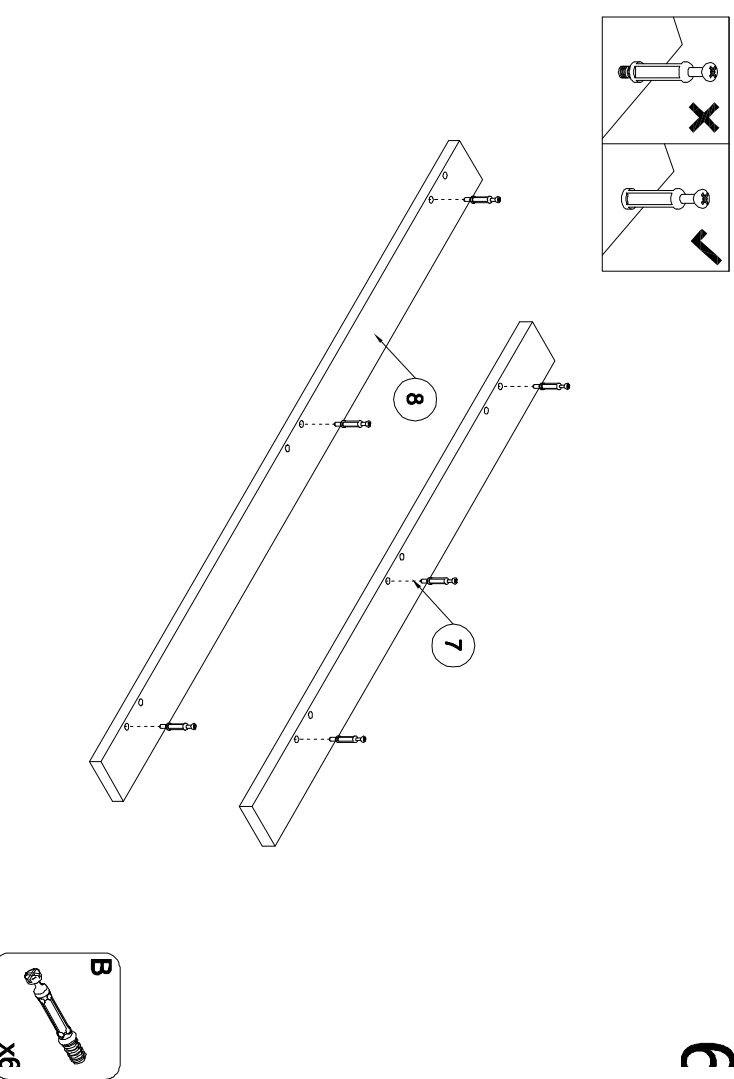 




7

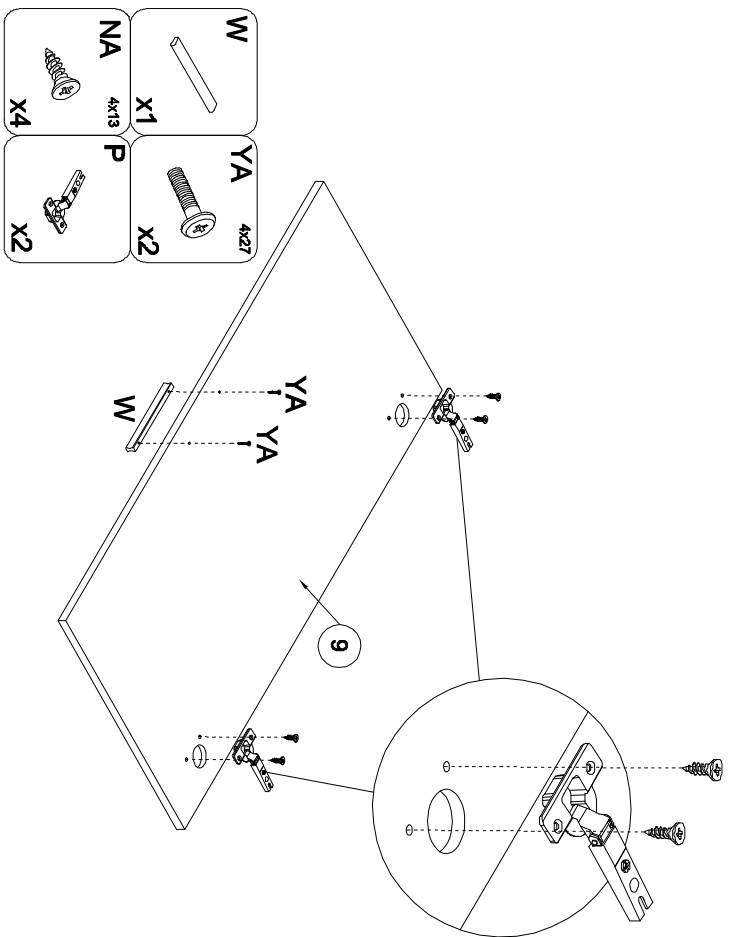 


8



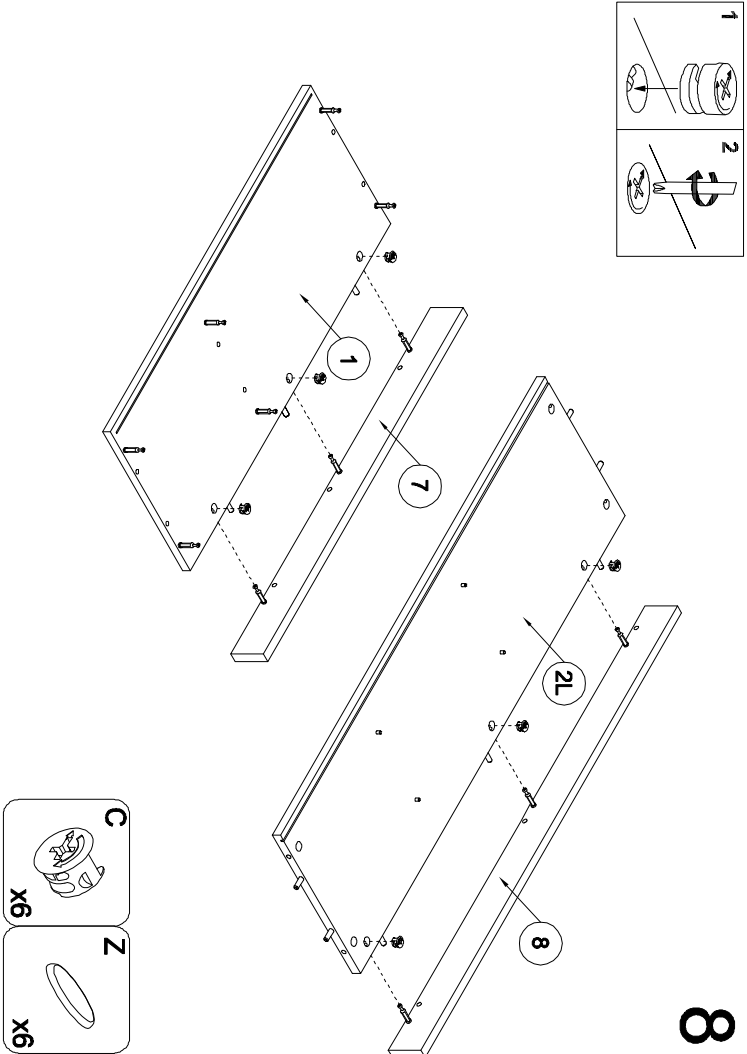 


9

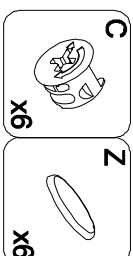 
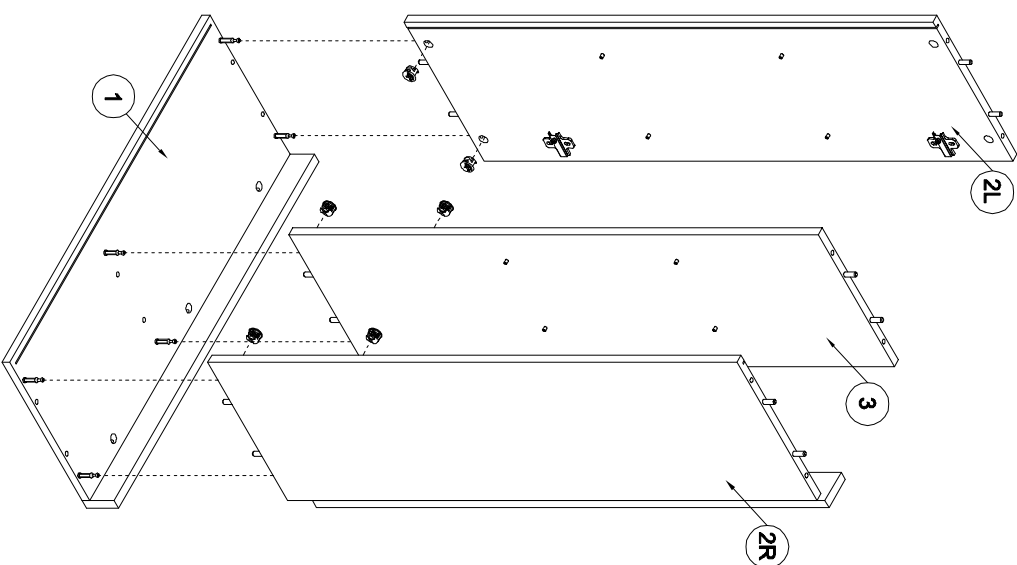 
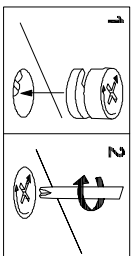 


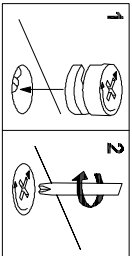 



10

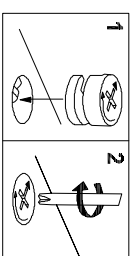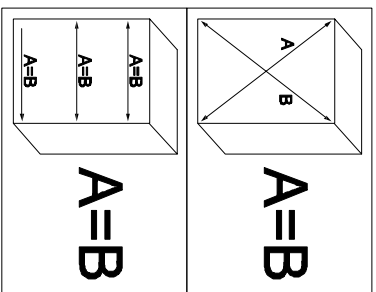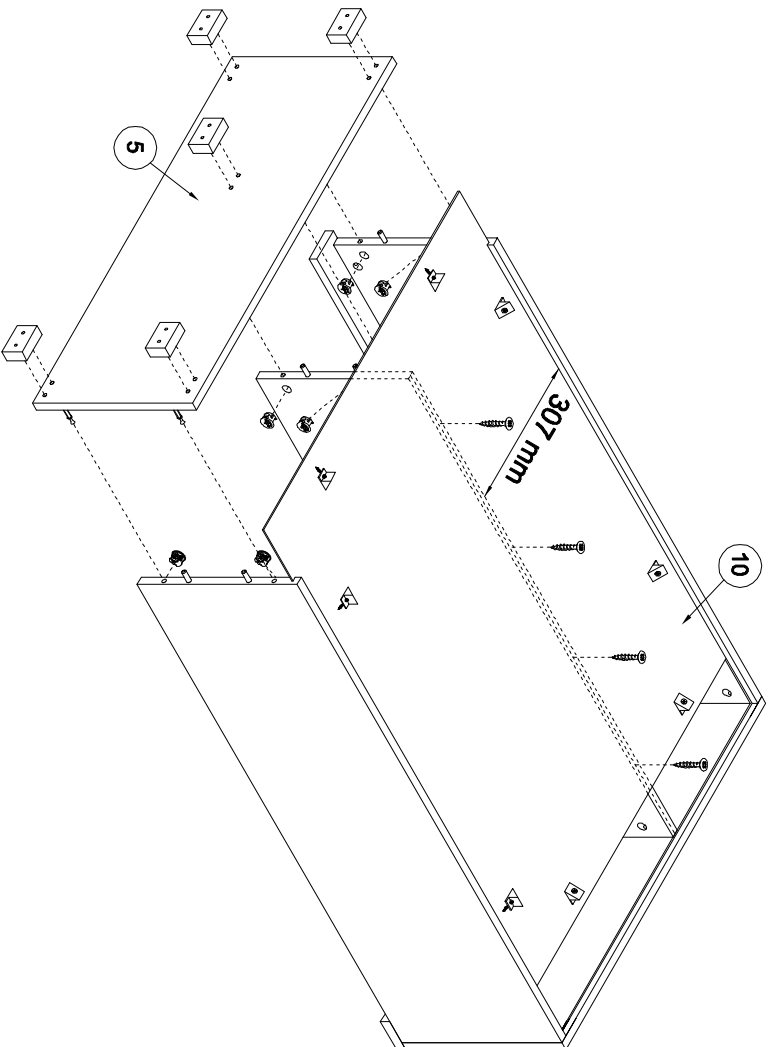   

11

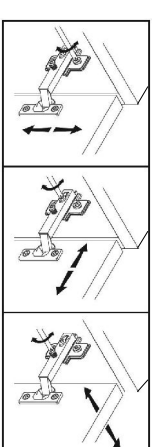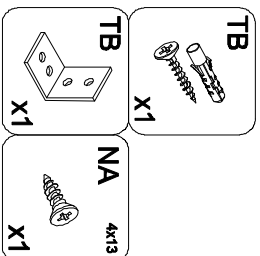  
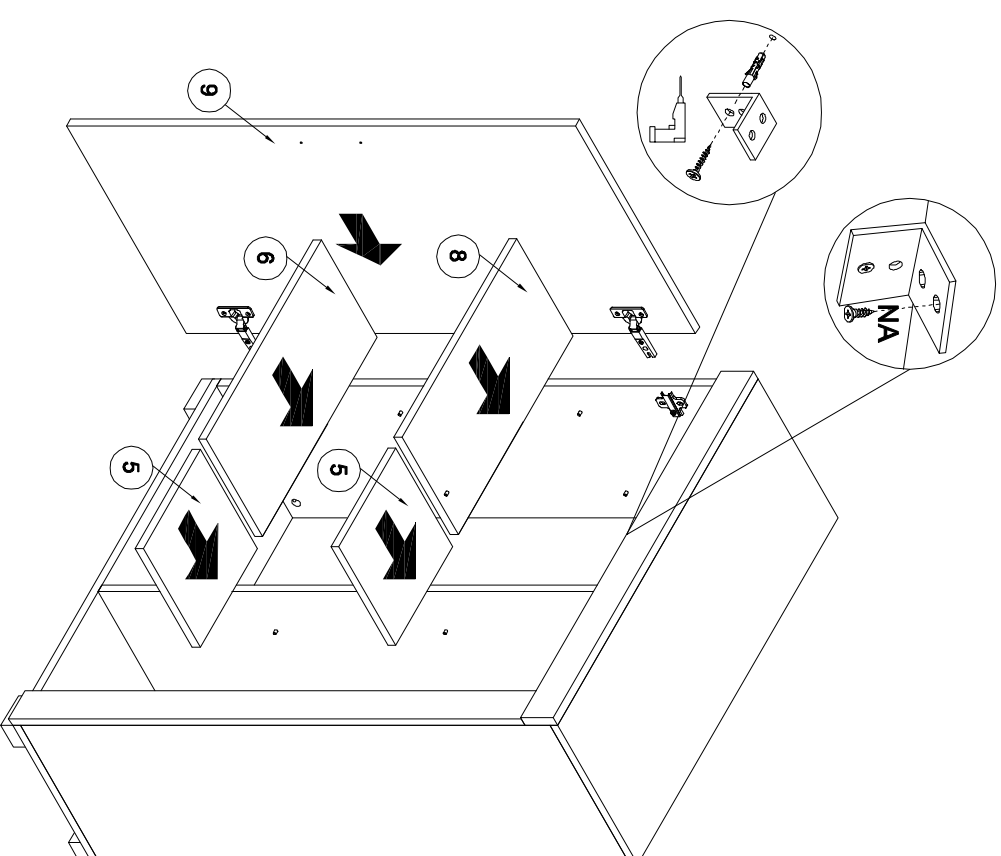 


RTV 140

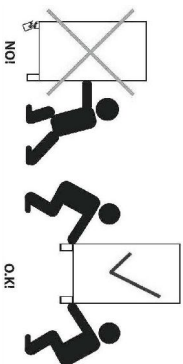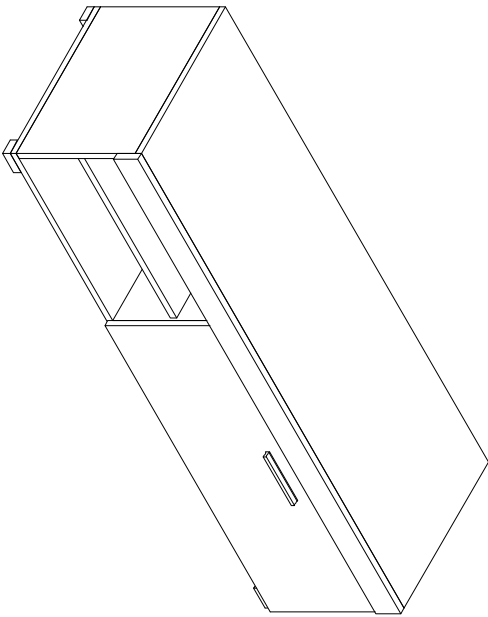  


23.05.2016

  
- (D) Montageanleitung
(FR) Notice de montage
(NL) Handleiding voor de montage
(CZ) Montážní návod
(HU) Szerelési útmutató
(TR) Montaj talimatı
- (GB) Assembly Instructions
(IT) Istruzioni di montaggio
(PL) Instrukcja montażu
(SK) Návod na montáž
(RO) Instrucțiuni de montaj
(RU) Инструкции по монтажу

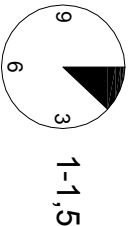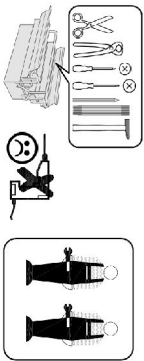

1

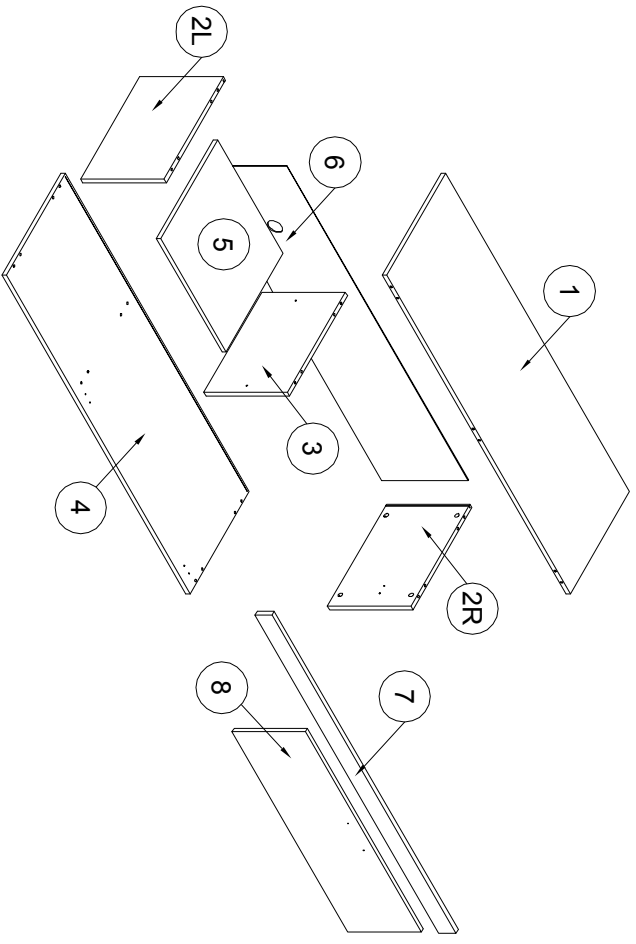 


O	ND	H	R	Y	W	YA	N
x1	x5	x4	x2	x5	x1	x2	x2
A	Z	B	NA	P	C	Z	X
x15	x4	x15	x4	x2	x15	x15	x8

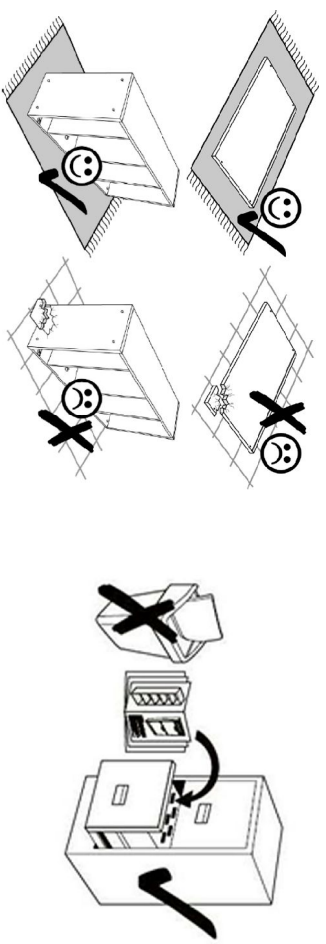 


2

 
3

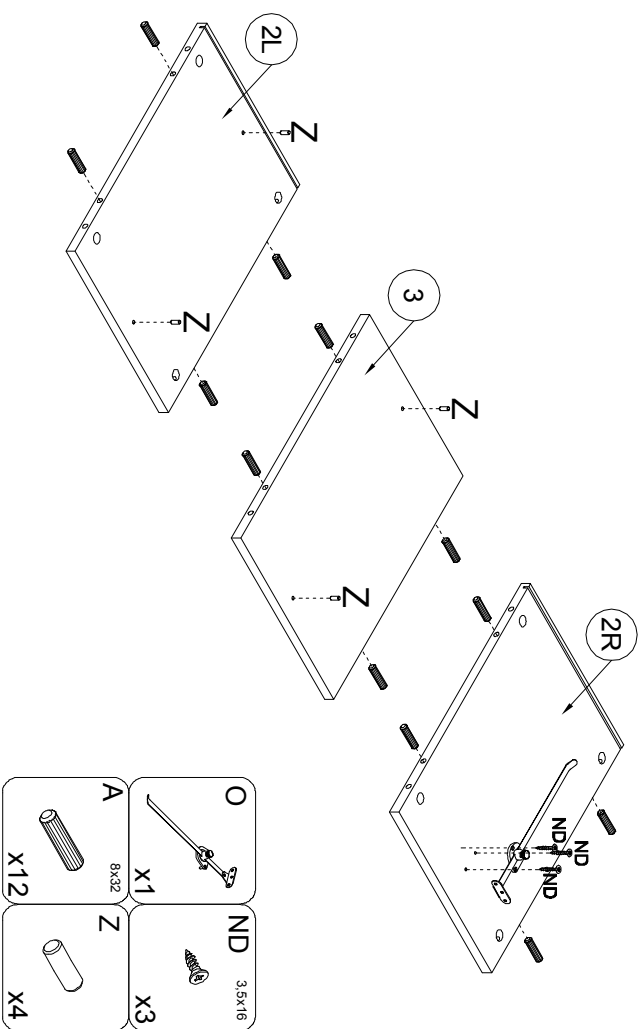


4










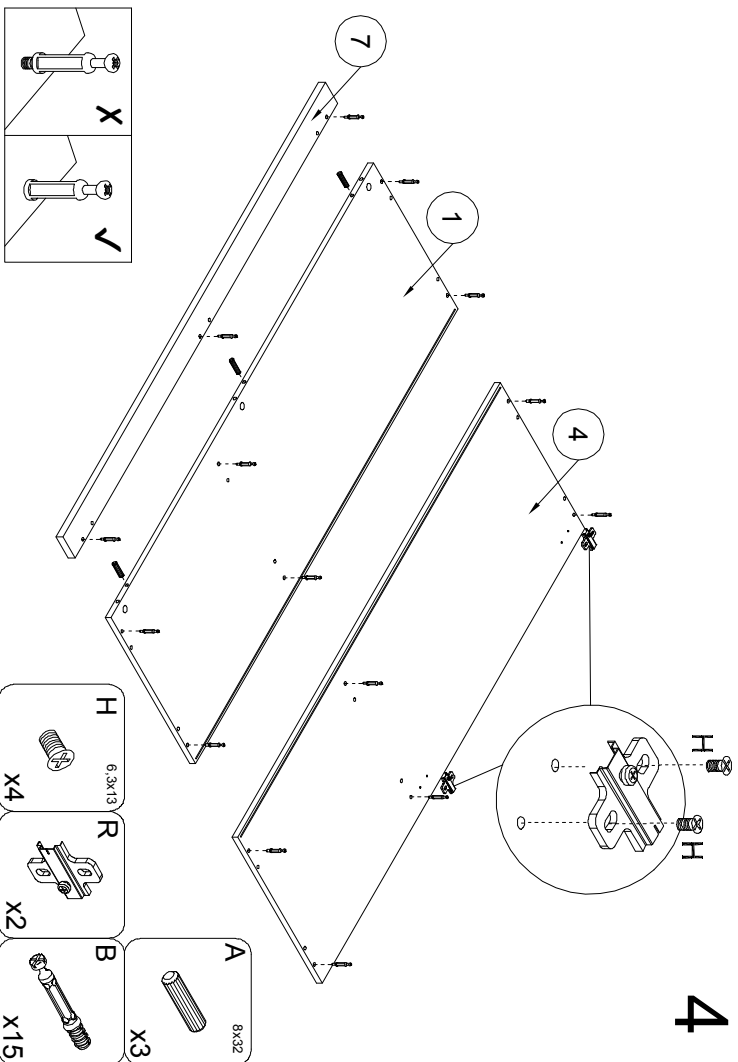 





5

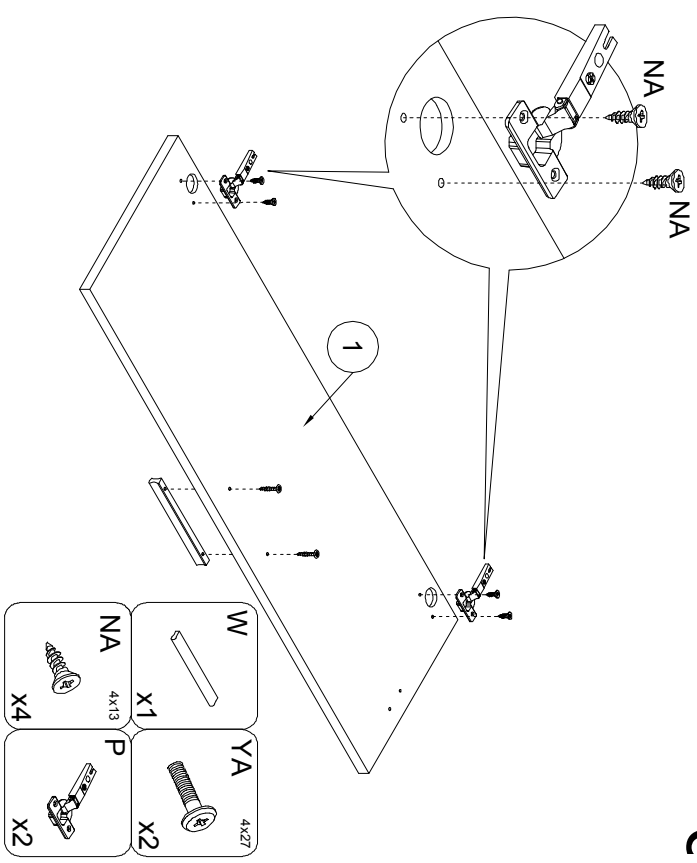 



6

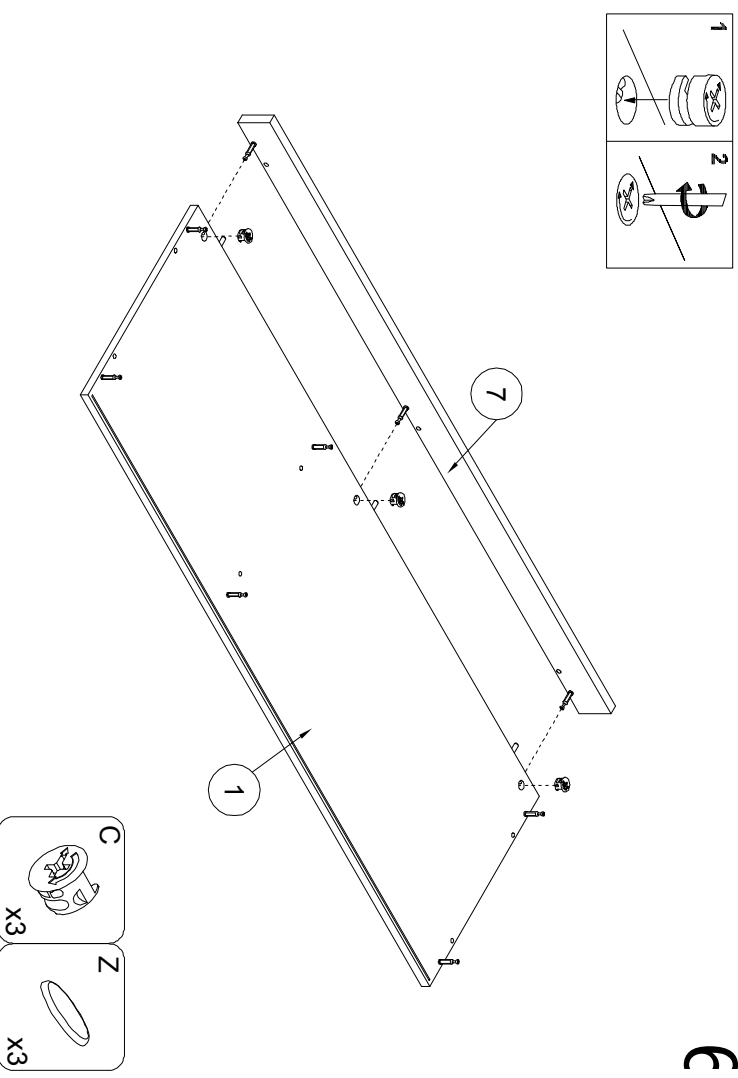 

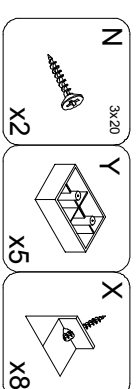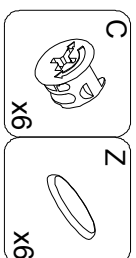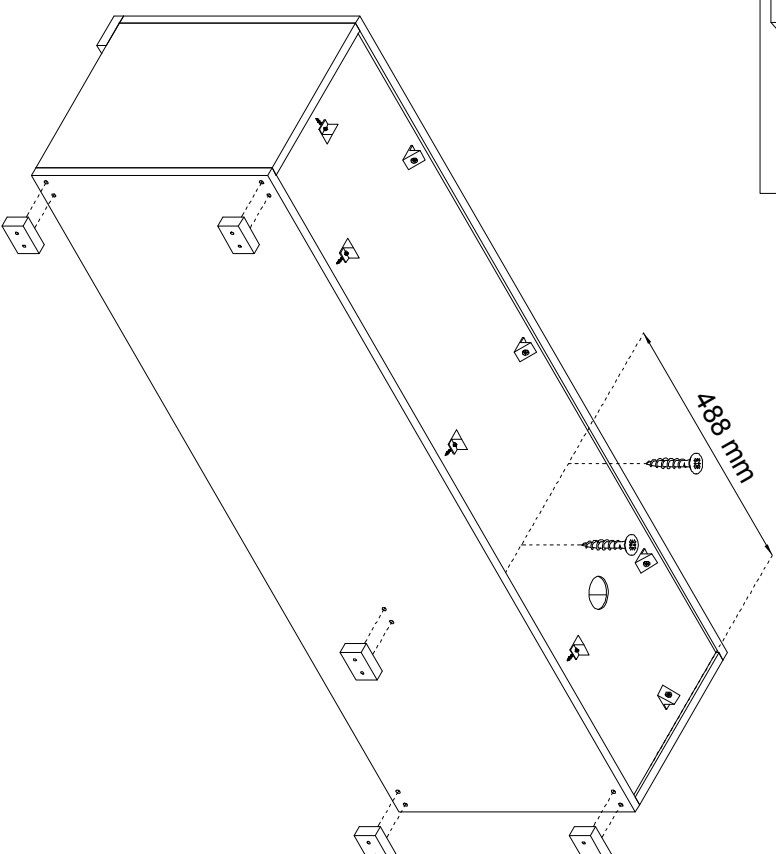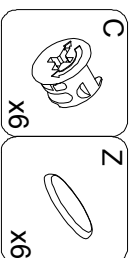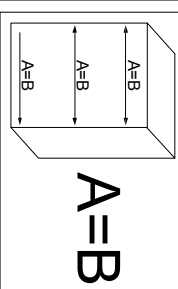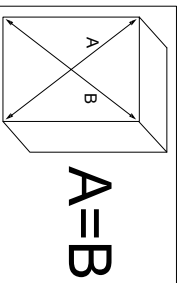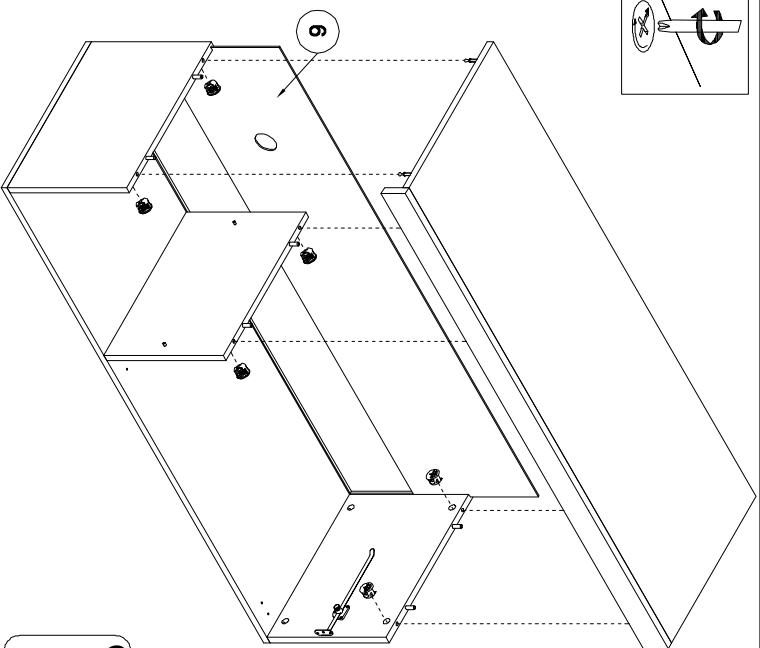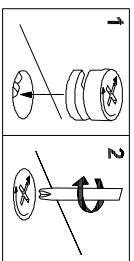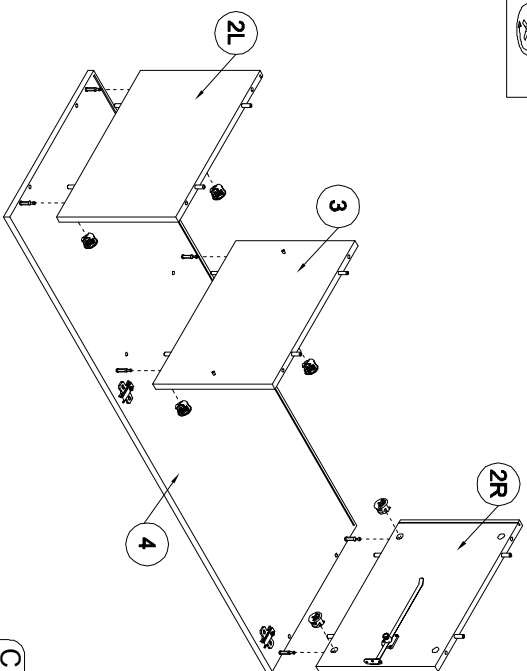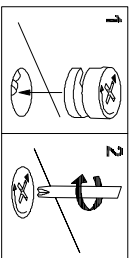          

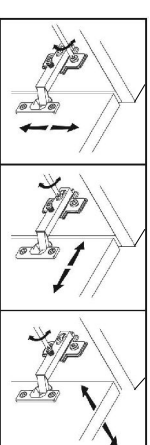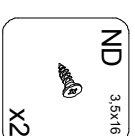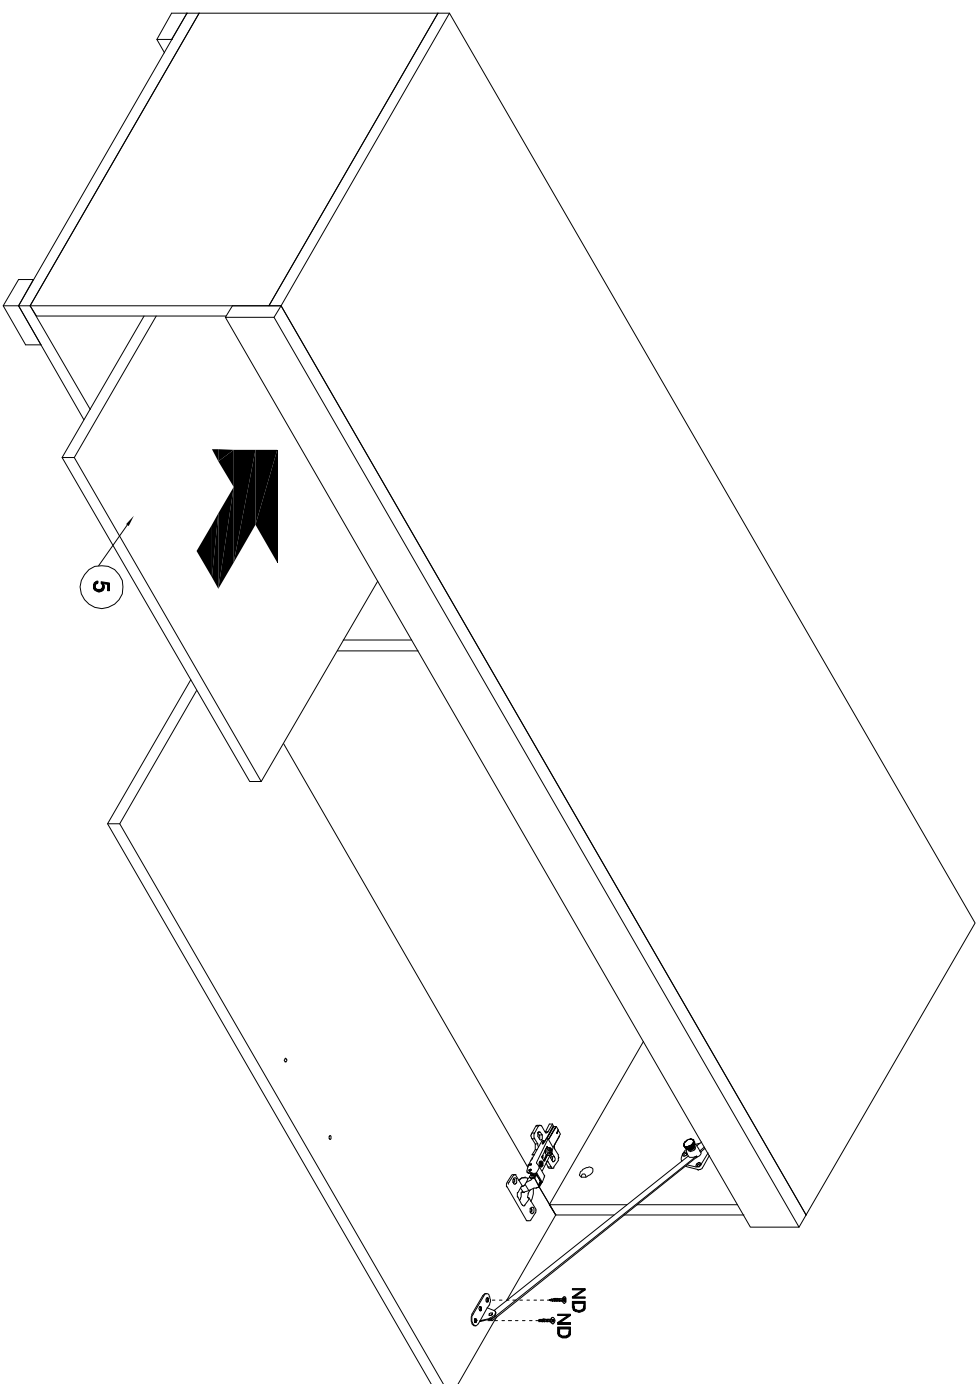   


WISZ. 80

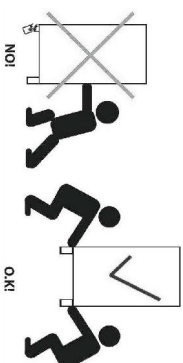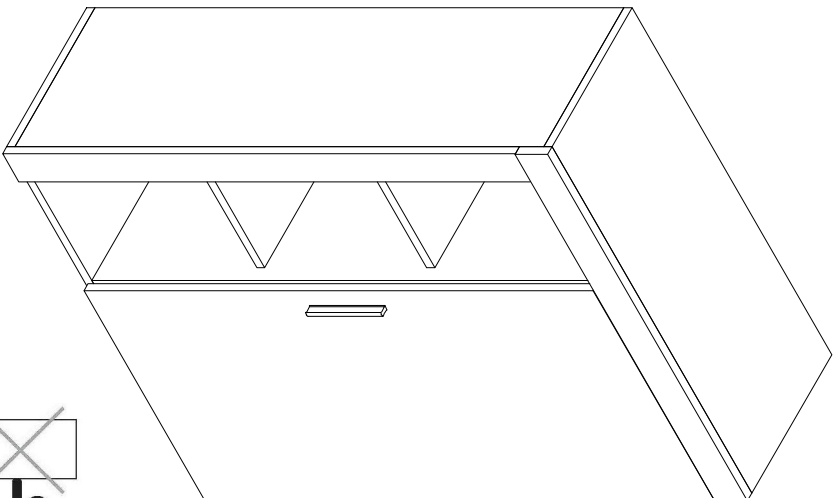  


23.05.2016


 
- (D) Montageanleitung
(FR) Notice de montage
(NL) Handleiding voor de montage
(CZ) Montážní návod
(HU) Szerelési útmutató
(TR) Montaj talimatı
- (GB) Assembly Instructions
(IT) Istruzioni di montaggio
(PL) Instrukcja montażu
(SK) Návod na montáž
(RO) Instrucțiuni de montaj
(RU) Инструкции по монтажу

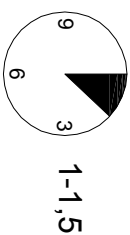

1

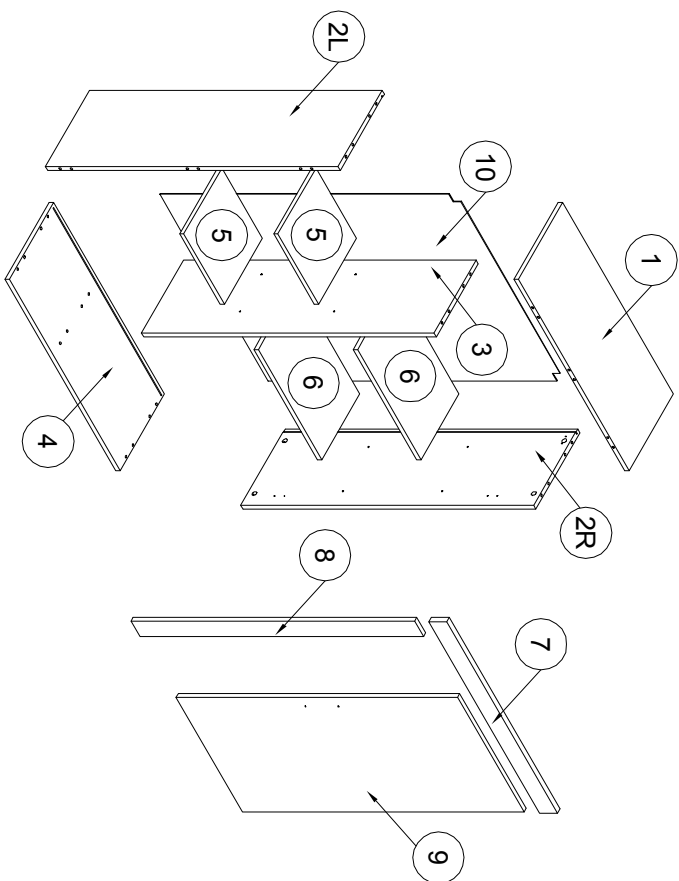 


R	x2	H	x4	W	x1	YA	x2	C	x18	Z	x18	NF	x4
A	x18	Z	x16	B	x18	NA	x4	P	x2	X	x8	N	x4
XC	x2												

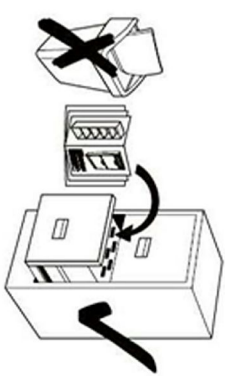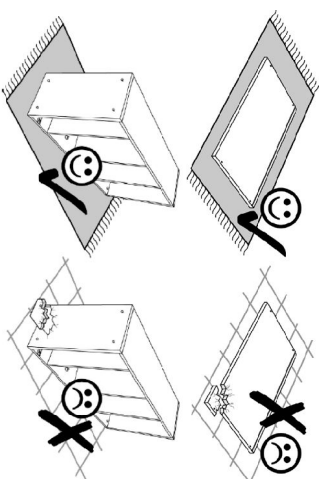  


2


 
3

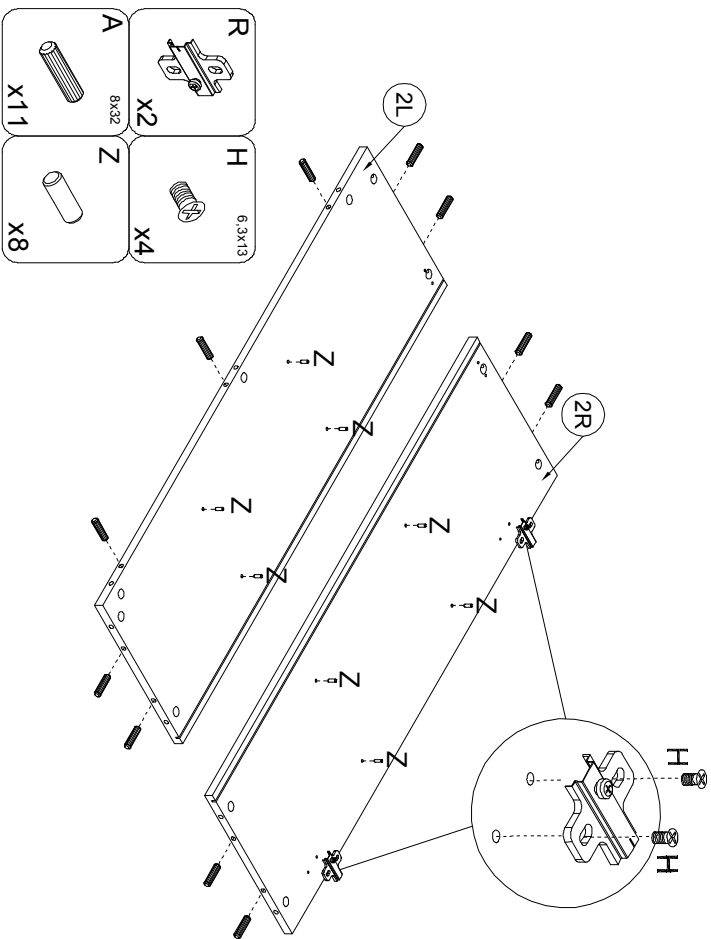





5

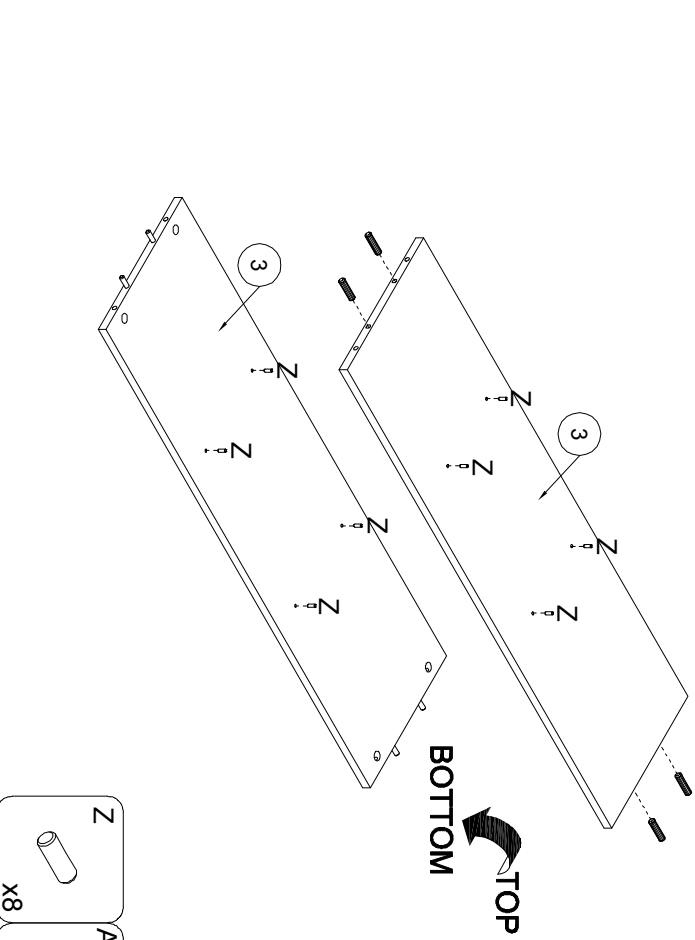 


4

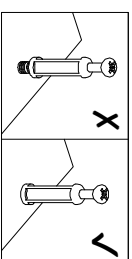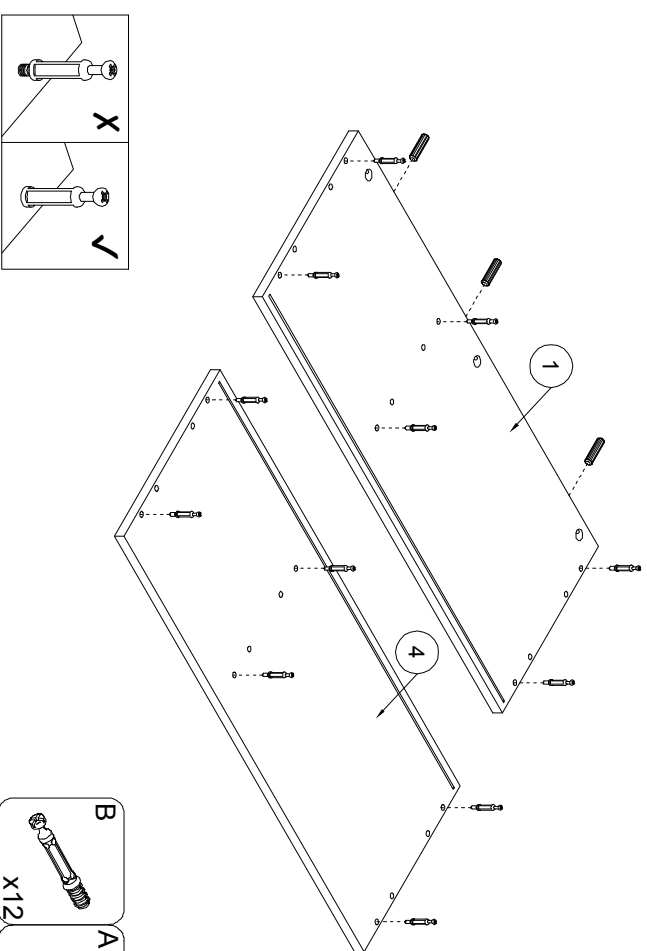  


6

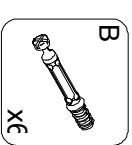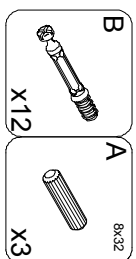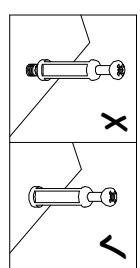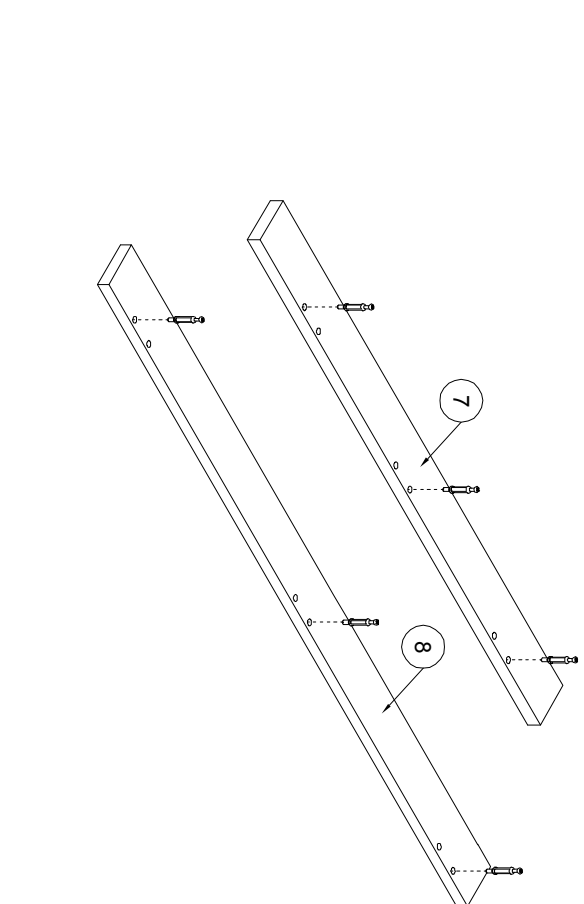    



7

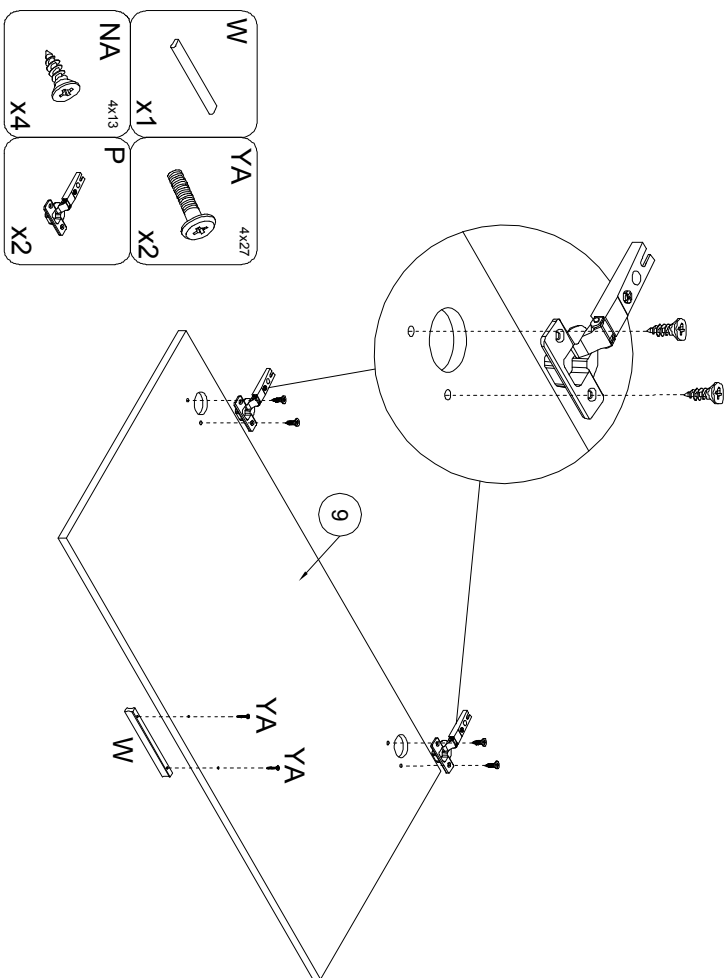 


8




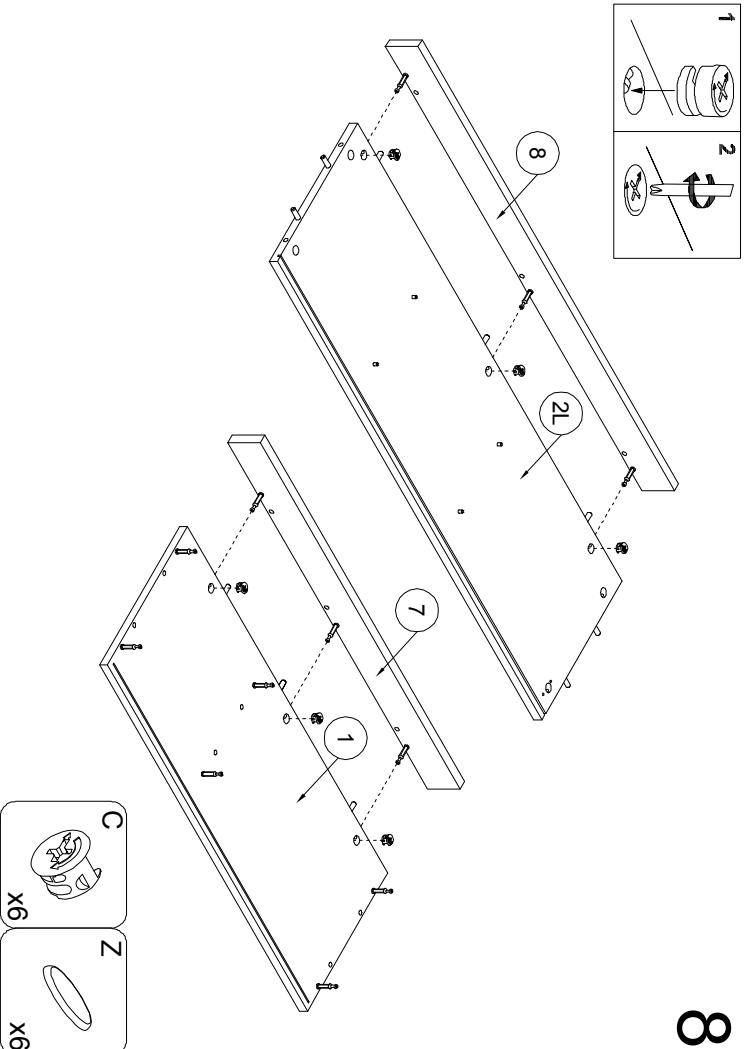 


5

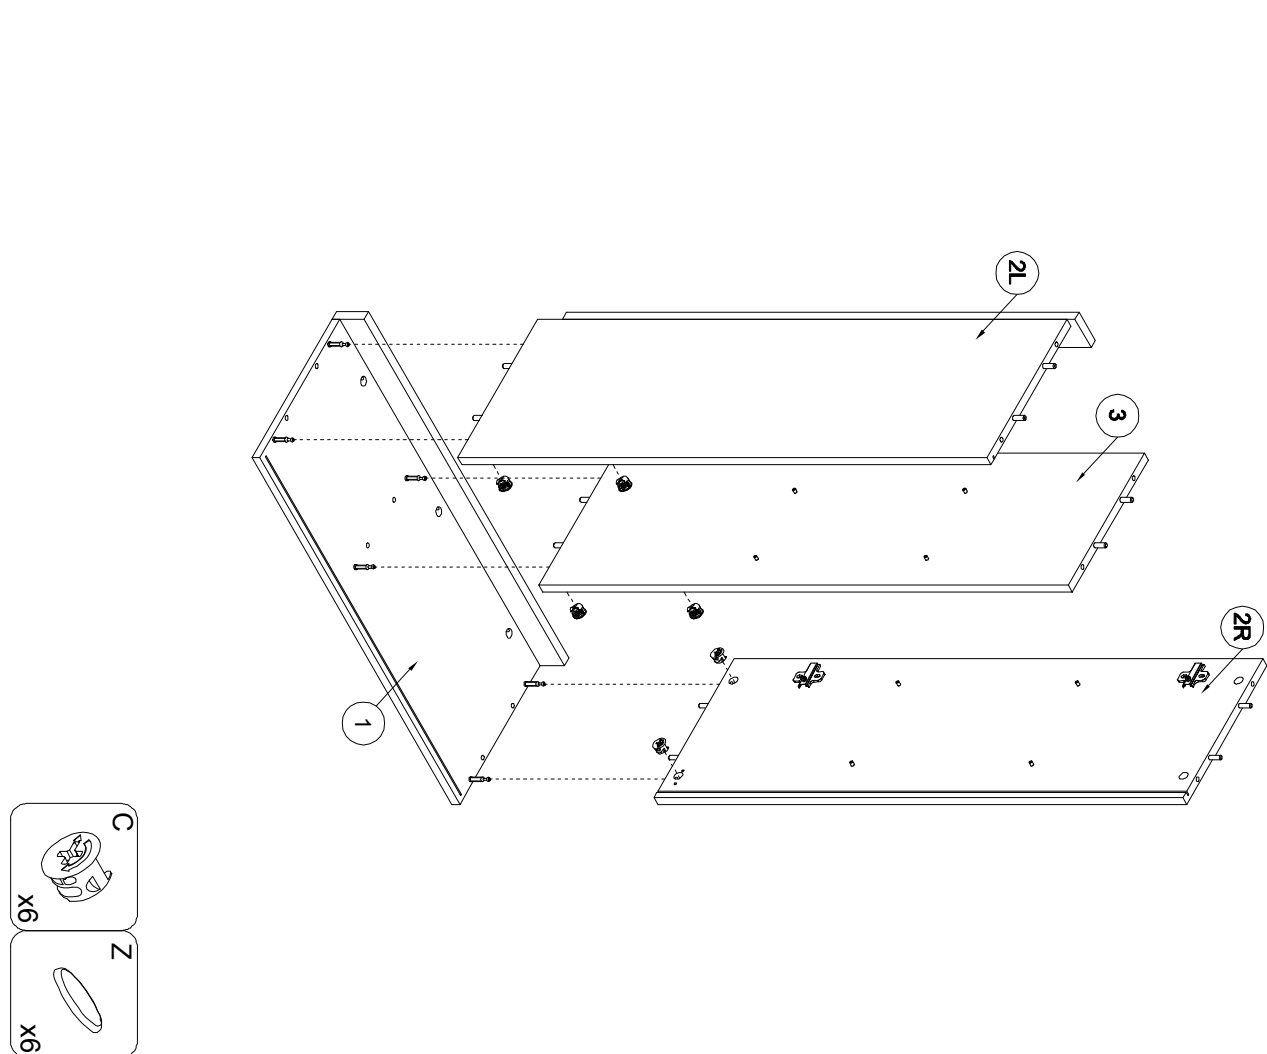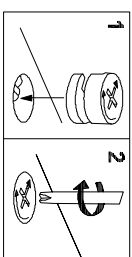  

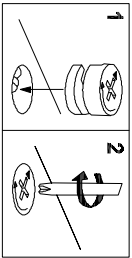 

10

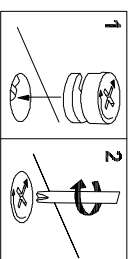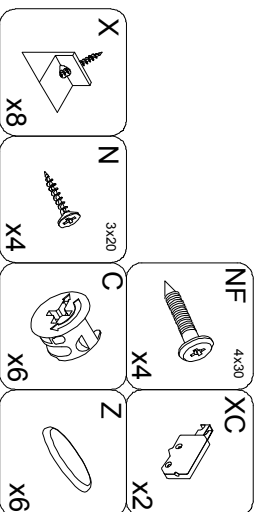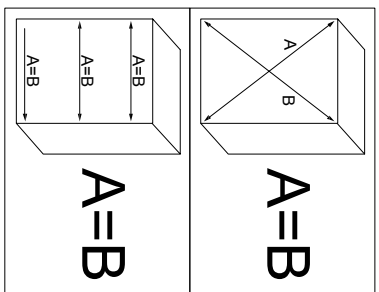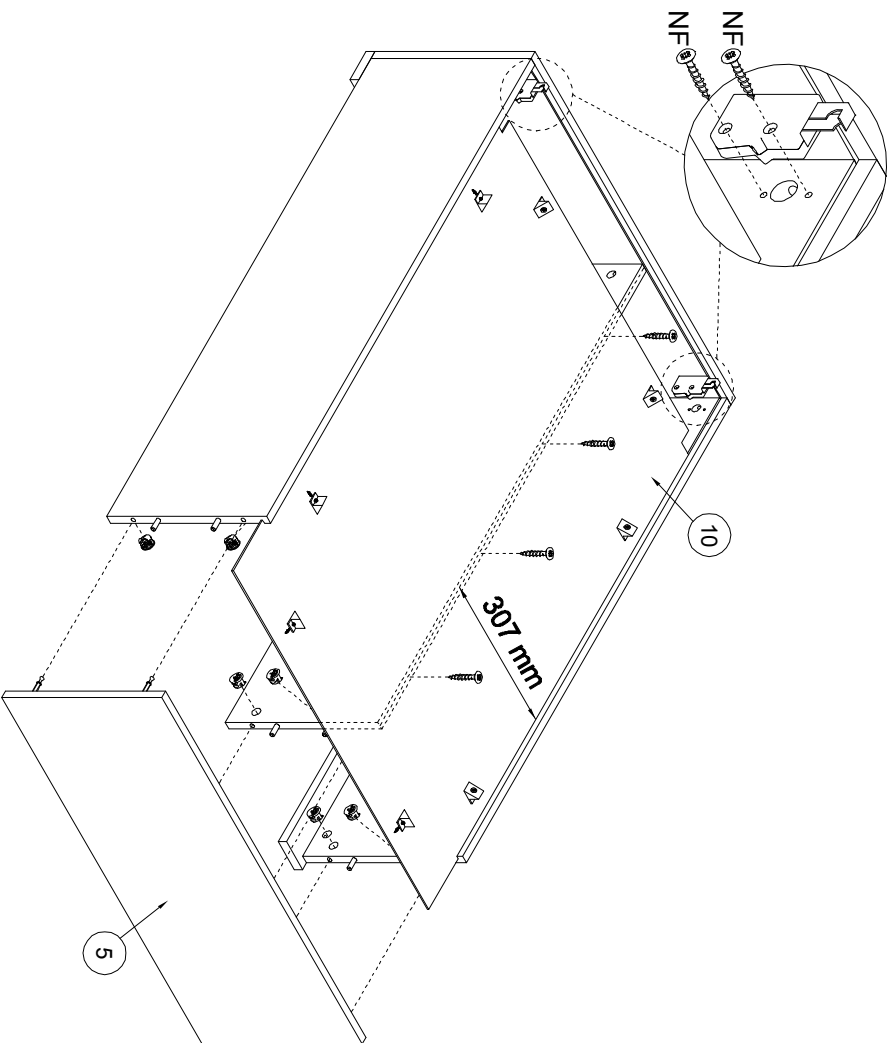    

11

